



MP3 / WMA PLAYER & USB FLASH DRIVE

User's Manual

For Model SLD512AT, SLD1GBAT Only

Release 1.0

The Product and materials mentioned in this manual are subject to change without prior notice.

Caution of Operation


1. Don't squeeze or cast the player to break the plastic case.
2. Don't operate the player in bathroom in high humidity or near the high temperature environment.
3. Don't direct press the LCD panel to damage the display surface.
4. Please do not use the player with earphone while driving an vehicle or riding a bicycle, It is not only dangerous, but also against the law. And please keep your volume down when crossing streets.
5. To prevent static, avoid the extreme dry surroundings.
6. Do not disconnect the player with PC while you copying file.
7. Manufacturer will not take any responsibility of files storage damage which cause by abnormal operation.
8. Please do not cleaning the player with chemicals such as alcohol or thinner.
9. Users are not allowed to repair the player by him/herself.
10. The MP3 player should be no driver need for windows XP/2000/ME except windows 98 (a installation disc is packed in the player box)
11. Set the HOLD switch to the release position before operation.
12. When you use this player as a USB stick, please always follow the correct operation method .Any misuse may cause file lost.
13. Do not drop the player, which probably cause battery fall off or damage its surface.
14. If you don't intend to use your MP3 player for an extended period of time, don't forget to remove the batteries from it to avoid any possibility of damage caused by battery leakage.




This MP3 can not play license protected files, please make sure your files do not have any copy protection.

Player overview


Front

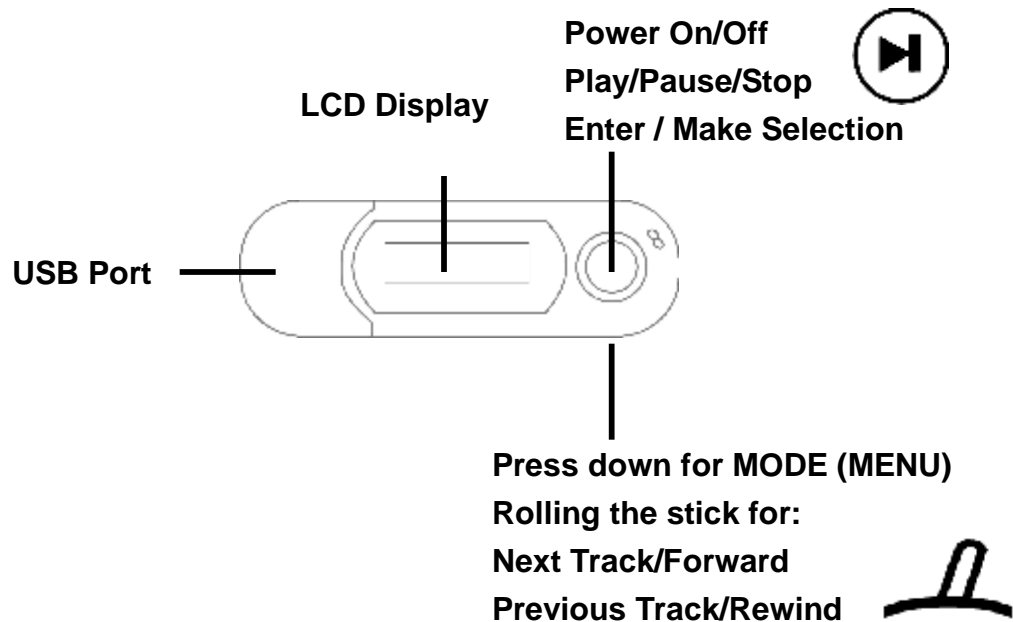

On the side

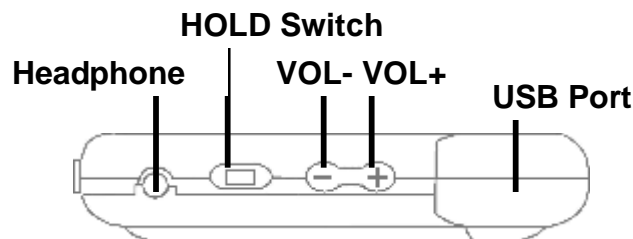

LCD

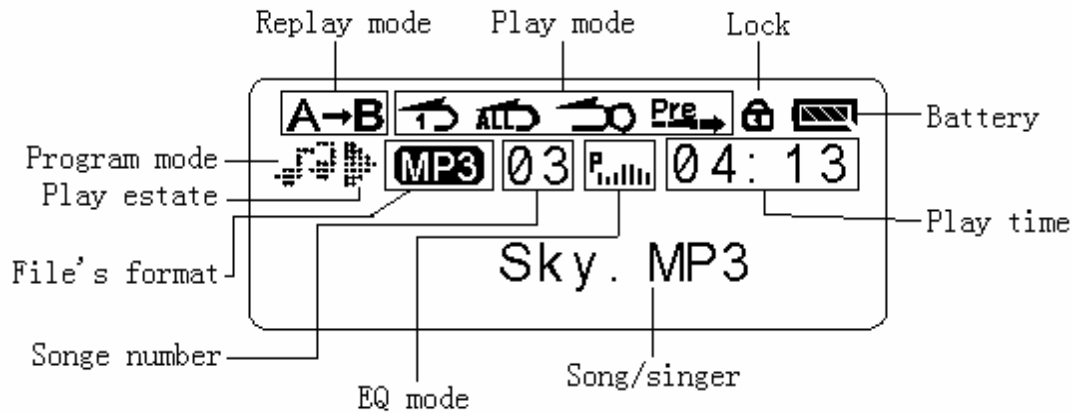 

USB Connection

1. Installing the driver for Windows 98:

(For windows operating system ME/2000/XP or greater, you need not install the driver, please skip this step.)

Insert the installation CD-ROM into the CD-ROM drive and driver installation will start.

The windows 98 Driver will be finished installation until the last window show out.

2. Connecting PC

Before operation, please verify the player is turned off, and one end of the USB cable came with the system is inserted into PC with another end into the MP3 player.

Once you connect to your computer, if your player displays <*USB RDY* >, then the USB connection is operational.

3. Download MP3 songs

A new drive will show in your computer, you can copy your audio files (in MP3 or WMA format) to your player and the download status will be displayed as follows.



Waiting



Copying file to MP3



Copying file to Computer

4. Removing USB device

1. Double click the Safely Remove Hardware icon in taskbar:



2. From Safely Remove Hardware screen, highlight "USB Mass Storage Device" item, then click "Stop" button.

3. Click "OK" button. After the "Safe to Remove Hardware" window appears, the player can be disconnected from PC safely.




Warning: An error might occur if remove the connection of the USB cable when transferring data. After data transferred and "Safe to remove hardware" window appeared the player can be removed from PC safely!


⚠ This MP3 NOT support FORMAT by computer, it will not functional if you use your computer to format it.

⚠ If you press mode stick when MP3 connected to computer, the MP3 will disconnect and you can operate it without battery, your computer USB port will be a power source.

MP3 Operation

Turning the power on/off

You can press the  button 2 seconds to turn on the MP3 player, the player will power on with the “Pengo” logo displays.





Press the  button 3 seconds, the player will save the data and enter the power off mode.

Key Lock Function

Turn on the hold switch and the screen will show out  , you must unlock it in order to operate your MP3 player.


Enter MENU and select function


After turn on the MP3 player you will see the main menu.     Roll stick  to select the function you want and press  button (in the middle of the rolling wheel) to enter the function you selected there are:







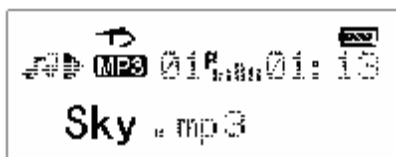

Music player  , Voice Record  , Voice player  , FM radio  , System Setting 

∅ After you turn the MP3 off normally, the player will remember the last function you selected.




Playing MP3 music










1. Enter the Music player  mode. you could see the following music player mode: no. of songs, song timer, file format and the ID3 Tag display.








2. When you press  button, the current track will be played as shown above.
3. If you want to select previous/next song, Rolling stick  to select the previous song or the next song.
4. The music will pause if you press .
5. Roll and pressing  to fast forward or fast backward.
6. If you want go back to main menu, please press  and hold 2 seconds then release it.
7. When the music is NOT playing, you can press  once to view folder list, you can choose the folder by rolling stick  and press it to get into the folder then press  button to go back to music play mode.

EQ Mode and Repetition Mode

When the music is playing, you can press the  once to enter the sub menu, roll  to select Equalizer or Repeat setting and press  button to enter the setting.

1. In EQ setting, please roll  to select EQ mode:  (Natural)  (Rock)  (Pop)  (Classical)  (Soft)  (Jazz)  (DBB) and press the  button to save the selected EQ mode.



2. Repeat setting:


 
 (Random)	play the music in the file randomly
 (Repeat One)	play a piece of music continuously
 (Folder)	all the music in the file
 (Repeat All)	play all the music in the file continuously
 (Intro)	play ex-10 seconds of all the music in orde



Volume Control

You could control the volume by pressing VOL+/VOL-button. The volume steps will increase or decrease when the VOL+/VOL-button is pressed correspondingly.

Voice Recording Function

1. Select Voice Record function in the menu.  and press  to enter.



2. Press  to enter this function, the MP3 player will ready to record. 

3. Press  to start recording, press  to pause and press  and hold 2 seconds to stop recording and save file.

↓ If the shows "Lisfis full", then you should change other menu, because there are no more than 99 files in f.


↓ When voice is recording .only "Play" button is valid.




Playback recorded voice

1. Select Voice player function in the menu.  and press  to enter.







2. Press  to enter this function,  then press  to play.

Go back to Music Player mode


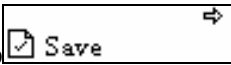

When you in other mode, if you want to enjoy the music, you can press  and hold it for more than 2 seconds and release


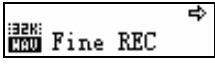



it, when you see the main menu, then roll  to select Music Player in the menu , then press .

FM radio(frequency modulation mode)








1. Select FM radio function in the menu.  and press  to enter.
2. You can rolling  to choose station by frequency or press  to select preset stations.
3. Automatically browse stations. Roll and hold  key 2 seconds, the player will browse forward or back ward at the speed of 100KHZ, and stop at the exist channel, if you want stop, roll  once.

4. Save FM station to Preset:











After make selection the channel, press , roll it to  then press  to save it. You can save up to 20 channels.

5. FM recording. After make selection the frequency and press  key, roll it to choose record mode  then press , the unit will start to record. If you want to pause the recording, please press . If you want to stop recording, please press .


Setting Options


Select System Setting function in the menu  and press  to enter. Roll  to choose settings and press  to get into the settings. In each setting, you can roll  to select the options and press  to confirm your selection. If you want cancel and back to Setting menu, you may press .

Brift introduction for settings:


 (Record time)	Set the time and date for the record file
 (Backlight time)	Last time when without any other press
 (Language select)	Set the different Language
 (Player close setting)	Set a time for player close
 (Re-player setting)	Set the replay
 (Contrast adjust)	Set the contrast
 (Connection mode)	For the choose of "disk password"
 (Memory mode)	To check the capacity of disk
 (Firmware version)	Display the firmware
 (Quit)	Quit the interface

1. Record time

Press "Vol+" or "Vol-" to set year/ month /day and roll  to change it.

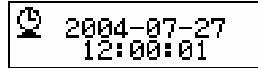

2. Back Light

You can setup how long the backlight will last according to your demands. You may roll  choose to turn off the backlight or let the backlight on for 3, 6 ,9, 12,15,seconds each time the button is pressed.

3. Language

You can select English, simplified Chinese character (GB2312) , and traditional Chinese character (Big5) ,Korean, Japanese, German, French, Italian, Dutch, Portuguese, Spanish, Polish.

4. Power Off

"Power save mode" : you can set a time "seconds" to close the player ,when set "0" shows the Functions is not valid.

"Sleeping mode" : you can set a time "seconds" to close the player, it is good for listening music Before sleep. Note: you should set sleeping mode for every time.

5. Replay mode

"Manual replay" : indicate you can set the stop point by yourself during A-B replaying

"Auto replay" : indicate the stop point can be set automatically during A-B replaying (suit for The recitation without music)

6. Contrast

You can adjust the contrast level 1 to 16.

7. Memory info

It shows the total memory percentage indicates the rate of memory used.

Troubleshoot

1、 Power on and no display

Check and exchange the battery

2、 Power on and no sound

Check the Hold witch is on or not

3、 Playing music but no sound

Check the volume level is too low

4、 Can not play the music

a. This MP3 player only can play MP3、 WMA、 WMV、 ASF file format and the bit rate is from 5K bps to 384K bps, Please check your file is out of the requirement.

5、 VBR MP3 Music File

Due to the timer counter of the VBR MP3 Music has a different from the fixed compression rate file.

The timer display of the VBR file will vary with different compression rate.

6、 Some Music File can't play

Please check the following:

- a. MP3 file should be in MPEG 1 Layer 3.
- b. MP3 files playback with multiple bit-rates and sample rates supported (5Kbps ~ 384Kbps)

c. This MP3 can not play license protected file download from internet, please make sure your file without any copy protection.

7、 Bad Song Problem

- a. The songs are not completed down load from PC (sudden disconnection the USB cable).
- b. The MP3 songs are not in MPEG1 Layer3.

8、 USB Connection Problem

Please check the following:

- 1) The cable connection between the PC and player is loose and bad contact.
- 2)Never disconnect the cable in progress of the files downloading between PC and player (it will cause the some bad songs/files and the player may be halt).

Safety and Caution:

1. Never listen the music in the highest sound level in long time and it will bad for health in listening.
2. Never disassemble the player by user.
3. Never operation or listen the player in driving car or motorcycle.

Support:

For tech support or RMA request, please write your email to support@pengo.com or call 1-888-PENGO99